



Smarter. Greener. Together.

Industrial Automation Headquarters

Taiwan: Delta Electronics, Inc.

Taoyuan Technology Center
No.18, Xinglong Rd., Taoyuan District,
Taoyuan City 33068, Taiwan
TEL: +886-3-362-6301 / FAX: +886-3-371-6301

Asia

China: Delta Electronics (Shanghai) Co., Ltd.

No.182 Minyu Rd., Pudong Shanghai, P.R.C.
Post code : 201209
TEL: +86-21-6872-3988 / FAX: +86-21-6872-3996
Customer Service: 400-820-9595

Japan: Delta Electronics (Japan), Inc.

Industrial Automation Sales Department
2-1-14 Shibadaimon, Minato-ku
Tokyo, Japan 105-0012
TEL: +81-3-5733-1155 / FAX: +81-3-5733-1255

Korea: Delta Electronics (Korea), Inc.

1511, 219, Gasan Digital 1-Ro., Geumcheon-gu,
Seoul, 08501 South Korea
TEL: +82-2-515-5305 / FAX: +82-2-515-5302

Singapore: Delta Energy Systems (Singapore) Pte Ltd.

4 Kaki Bukit Avenue 1, #05-04, Singapore 417939
TEL: +65-6747-5155 / FAX: +65-6744-9228

India: Delta Electronics (India) Pvt. Ltd.

Plot No.43, Sector 35, HSIIDC Gurgaon,
PIN 122001, Haryana, India
TEL: +91-124-4874900 / FAX: +91-124-4874945

Thailand: Delta Electronics (Thailand) PCL.

909 Soi 9, Moo 4, Bangpoo Industrial Estate (E.P.Z),
Pattana 1 Rd., T.Phraksa, A.Muang,
Samutprakarn 10280, Thailand
TEL: +66-2709-2800 / FAX: +66-2709-2827

Australia: Delta Electronics (Australia) Pty Ltd.

Unit 2, Building A, 18-24 Ricketts Road,
Mount Waverley, Victoria 3149 Australia
Mail: IA.au@deltaww.com
TEL: +61-1300-335-823 / +61-3-9543-3720

Americas

USA: Delta Electronics (Americas) Ltd.

5101 Davis Drive, Research Triangle Park, NC 27709, U.S.A.
TEL: +1-919-767-3813 / FAX: +1-919-767-3969

Brazil: Delta Electronics Brazil Ltd.

Estrada Velha Rio-São Paulo, 5300 Eugênio de
Melo - São José dos Campos CEP: 12247-004 - SP - Brazil
TEL: +55-12-3932-2300 / FAX: +55-12-3932-237

Mexico: Delta Electronics International Mexico S.A. de C.V.

Gustavo Baz No. 309 Edificio E PB 103
Colonia La Loma, CP 54060
Tlalnepantla, Estado de México
TEL: +52-55-3603-9200

DVP-0051720-04

EMEA

EMEA Headquarters: Delta Electronics (Netherlands) B.V.

Sales: Sales.IA.EMEA@deltaww.com
Marketing: Marketing.IA.EMEA@deltaww.com
Technical Support: iatechnicalsupport@deltaww.com
Customer Support: Customer-Support@deltaww.com
Service: Service.IA.emea@deltaww.com
TEL: +31(0)40 800 3900

BENELUX: Delta Electronics (Netherlands) B.V.

Automotive Campus 260, 5708 JZ Helmond, The Netherlands
Mail: Sales.IA.Benelux@deltaww.com
TEL: +31(0)40 800 3900

DACH: Delta Electronics (Netherlands) B.V.

Coesterweg 45, D-59494 Soest, Germany
Mail: Sales.IA.DACH@deltaww.com
TEL: +49(0)2921 987 0

France: Delta Electronics (France) S.A.

ZI du bois Challand 2, 15 rue des Pyrénées,
Lisses, 91090 Evry Cedex, France
Mail: Sales.IA.FR@deltaww.com
TEL: +33(0)1 69 77 82 60

Iberia: Delta Electronics Solutions (Spain) S.L.U

Ctra. De Villaverde a Vallecas, 265 1º Dcha Ed.
Hormigueras - P.I. de Vallecas 28031 Madrid
TEL: +34(0)91 223 74 20
Carrer Llacuna 166, 08018 Barcelona, Spain
Mail: Sales.IA.Iberia@deltaww.com

Italy: Delta Electronics (Italy) S.r.l.

Via Meda 2-22060 Novedrate(CO)
Piazza Grazioli 18 00186 Roma Italy
Mail: Sales.IA.Italy@deltaww.com
TEL: +39 039 8900365

Russia: Delta Energy System LLC

Vereyskaya Plaza II, office 112 Vereyskaya str.
17 121357 Moscow Russia
Mail: Sales.IA.RU@deltaww.com
TEL: +7 495 644 3240

Turkey: Delta Greentech Elektronik San. Ltd. Sti. (Turkey)

Şerifali Mah. Hendem Cad. Kule Sok. No:16-A
34775 Ümraniye - İstanbul
Mail: Sales.IA.Turkey@deltaww.com
TEL: + 90 216 499 9910

MEA: Eltek Dubai (Eltek MEA DMCC)

OFFICE 2504, 25th Floor, Saba Tower 1,
Jumeirah Lakes Towers, Dubai, UAE
Mail: Sales.IA.MEA@deltaww.com
TEL: +971(0)4 2690148



Digitized Automation for a Changing World

DVP201 / 202 / 211LC-SL Load Cell Module Operation Manual

DVP201/202/211LC-SL

Load Cell Module Operation Manual

Revision History

Version	Revision	Date
1 st	The first version was published.	2014/09/26
2 nd	1. CH1: update resolution information 2. CH2: update indicator information 3. CH4: add CR#20-21, CR#95-98, CR#106-143 and update CR#2, CR#7, CR#27-28, CR#48-49, CR#52-53, CR#104-105, and CR#109	2019/02/21
3 rd	1.CH4:Add section 4.3.6, 4.3.7 and 4.3.8	2021/08/11
4 th	1.CH1: Update specification concerning filtering and add information of ingress protection rating, atmosphere pressure range as well as weights. 2.CH4: Update table of registers in section 4.1. Update information of CR#6, CR#27-36 and CR#41-46 in section 4.2. Update description of filtering in section 4.3.4 and zero tracking in section 4.3.7. 3.CH5: Update description of adjustment and content of example 2.	2022/10/3

DVP201/202/211LC-SL Load Cell Module

Operation Manual

Table of Contents

Chapter 1 Introduction

1.1	Principle of a Load Cell.....	1-2
1.2	Introduction of a Load Cell	1-2
1.3	Functional Specifications	1-2

Chapter 2 Dimensions and Profile

2.1	Dimensions	2-2
2.2	Profile	2-2
2.3	Arrangement of the Terminals	2-3
2.4	Description of the Indicators.....	2-3

Chapter 3 Installation and Wiring

3.1	Installation	3-2
3.1.1	Connecting a Load Cell Module to a DVP-SV series PLC.....	3-2
3.1.2	Installing a DVP-SV series PLC and a Load Cell Module on a DIN rail.....	3-2
3.2	Communication	3-3
3.3	External Wiring.....	3-4
3.4	Selecting a Load Cell Sensor.....	3-6

Chapter 4 Control Registers

4.1	Table of Control Registers.....	4-2
4.2	Descriptions of the Control Registers	4-9
4.3	Descriptions of Functions	4-15
4.3.1	Measuring a Net Weight	4-15
4.3.2	Stability Check	4-15
4.3.3	Determining Zero.....	4-16
4.3.4	Filtering out Weights	4-16
4.3.5	Correspondence between Current Outputs and Weights	4-17
4.3.6	Zero Tracking	4-18
4.3.7	Weight Updates	4-18
4.3.8	Output Values Set For Y Points.....	4-18

Chapter 5 Making Adjustment

5.1 Steps in Adjusting Points 5-3

5.2 Example 1 5-4

5.3 Example 2 5-5



Chapter 1 Introduction

Table of Contents

1.1	Principle of a Load Cell.....	1-2
1.2	Introduction of a Load Cell	1-2
1.3	Functional Specifications	1-2

1

Thanks for using the load cell module DVP201/202/211LC-SL. To ensure that the product is correctly installed and operated, users need to read the operation manual carefully before they use DVP201/202/211LC-SL.

- ✓ The operation manual provides functional specifications, and introduces installation, basic operation and setting, and the usage of DVP201/202/211LC-SL.
- ✓ DVP201/202/211LC-SL is an OPEN-TYPE device. It should be installed in a control cabinet free of airborne dust, humidity, electric shock and vibration. To prevent non-maintenance staff from operating DVP201/202/211LC-SL, or to prevent an accident from damaging DVP201/202/211LC-SL, the control cabinet in which DVP201/202/211LC-SL is installed should be equipped with a safeguard. For example, the control cabinet in which DVP201/202/211LC-SL is installed can be unlocked with a special tool or key. DO NOT touch any terminal when DVP201/202/211LC-SL is powered up.
- ✓ In order to prevent the product from being damaged, or prevent staff from being hurt, users need to read the operation manual carefully, and follow the instructions in the manual.

1.1 Principle of a Load Cell

If a metallic material undergoes tension or strain, it will become thin, and its electrical impedance will increase. If a metallic material is compressed, its electrical impedance will become small. A strain gauge adopting this principle is called a load cell. Such sensing device is able to convert physical pressure into electrical signals, and therefore it is widely used on occasions on which loads, tension and pressure need to be converted into electrical signals.

1.2 Introduction of a Load Cell

A load cell module provides 4-wire or 6-wire load cells with various eigenvalues. Therefore, its response time can be adjusted according to users' requirements. On this basis, the requirements of load application markets can be easily met. Besides, a DVP series PLC* can read data in a load cell module or write data to a load cell module by means of the instruction FROM/TO.

*: DVP-SV series PLCs, DVP-EH2-L series PLCs, DVP-SA2 series PLCs, and DVP-SX2 series PLCs support left-side extension modules.

1.3 Functional Specifications

DVP201/202/211LC-SL	
Load cell module	Voltage output
Rated supply voltage/Power consumption	24 V DC (-15 to +20%)/5 W
Static minimum/maximum voltage	20.4 V/28.8 V DC
Dynamic minimum/maximum voltage	18.5 V/30.2 V DC
Maximum current consumption	150 mA
Input signal range	±200 mV DC
Sensibility	+5 V DC +/-5%
Resolution	Data output: 32 bits
Highest precision	0.04%
Communication interface	RS-232, RS-485
Applicable sensor type	4-wire or 6-wire load cell
Expanding a temperature coefficient	≤ ± 20 ppm/K v. E
Reducing a temperature coefficient to zero	≤ ± 0.1 μV/K
Linearity error	≤ 0.015%
Response time	2.5, 10, 16, 20, 50, 60, 100, 200, and 400ms
Eigenvalue applicable to a load cell	0~1, 0~2, 0~4, 0~6, 0~20, 0~40 and 0~80 mV/V

DVP201/202/211LC-SL		
Load cell module		Voltage output
Maximum distance for connecting a load cell		100 meters
Maximum output current		5 V DC * 300 mA
Allowable load		40~4,010 Ω
Filtering		Extrema/ Average/ Low-pass filtering
Common-mode rejection ratio (CMRR @50/60 Hz)		≥100 dB
Isolation		Between a digital circuit and the ground: 500 V AC Between an analog circuit and the ground: 500 V AC Between an analog circuit and a digital circuit: 500 V AC
Connecting to a DVP series PLC		Load cell modules can be connected to the left side of a PLC. The modules connected to a PLC are numbered from 100 to 107 according to the closeness to the PLC.
Operation/Storage		Operation: 0~55°C (temperature), 5~95% (humidity), pollution degree 2 Storage: -25~70°C (temperature), 5~95% (humidity)
Vibration/Shock resistance		International standards: IEC 61131-2, IEC 68-2-6 (TEST Fc)/IEC 61131-2 & IEC 68-2-27 (TEST Ea)
Ingress protection rating		IP20
Atmospheric pressure range		Operating: 1013 ~ 795hPa, equals 0~2000 meters above sea level. Storage: 1013 ~ 700hPa, equals 0~3000 meters above sea level.
Weights	DVP201LC-SL	122g
	DVP202LC-SL	132g
	DVP211LC-SL	

		DVP211LC-SL	
		Electrical specifications for input terminals	Electrical specifications for output terminals
Input/Output terminal		X0, X1	Y0, Y1, Y2, Y3
Type		Digital input	Transistor
Form		DC (sinking or sourcing)	--
Specifications		Input current: 24 V DC, 5 mA	Voltage specifications: 5~30 V DC #1
Input impedance		4.7 K Ω	--
Maximum switch frequency		10 kHz	1 kHz
Action level	Off \rightarrow On	> 15 V DC	--
	On \rightarrow Off	< 5 V DC	--
Response time	Off \rightarrow On	< 20 μ s	< 100 μ s
	On \rightarrow Off	< 50 μ s	< 150 μ s
Maximum load	Resistive load	--	0.5 A/output (4 A/COM)#2
	Inductive load	--	15 W (30 V DC)
	Bulb	--	2.5 W (30 V DC)

Note: In order to meet DIN 1319-1, an error needs to be less than or equal to 0.05% at 20 °C + 10 K.

#1: UP and ZP should be connected to a 24 V DC power supply. The current that an output terminal consumes is approximately 1 mA.

#2: In an NPN mode, ZP is used. In a PNP mode, UP is used.

MEMO






Chapter 2 Dimensions and Profile


Table of Contents

2.1	Dimensions	2-2
2.2	Profile.....	2-2
2.3	Arrangement of the Terminals.....	2-3
2.4	Description of the Indicators.....	2-3

2.1 Dimensions

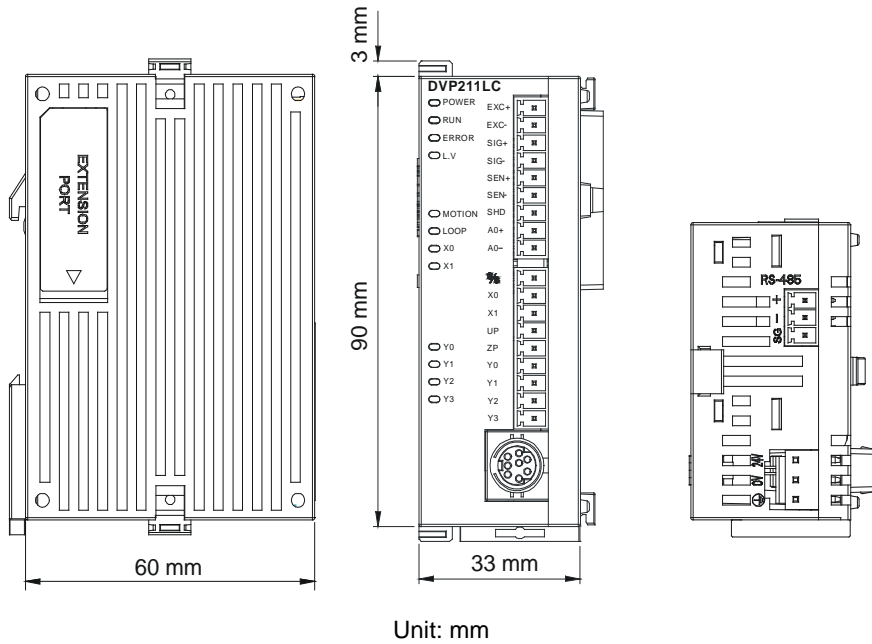

2.2 Profile

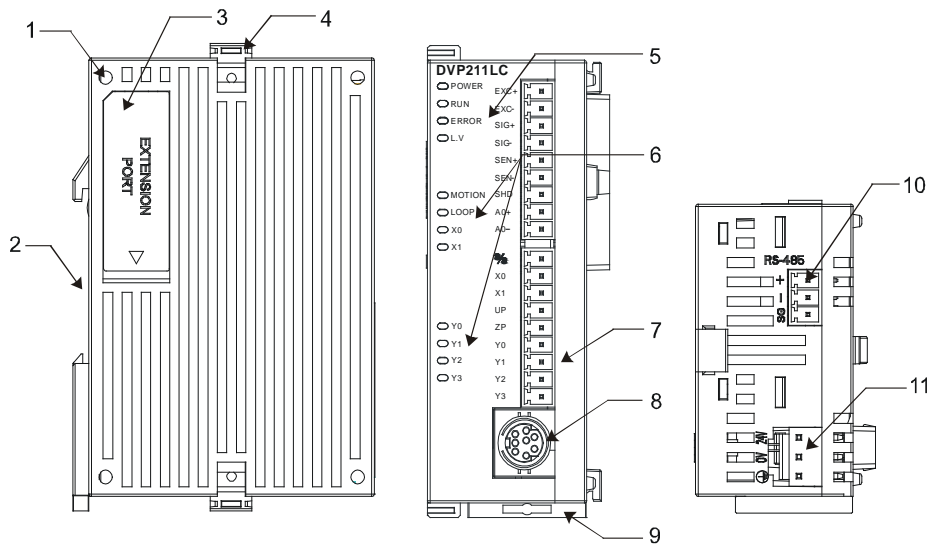

1. Mounting hole	2. Mounting groove (35mm)
3. Extension port	4. I/O module clip
5. Status indicator (refer to section 2.4 for details)	6. Functional status indicator (refer to section 2.4 for details)
7. I/O terminals	8. RS-232 port
9. DIN rail clip	10. RS-485 port
11. Power input	

2.3 Arrangement of the Terminals

EXC+	EXC-	SIG+	SIG-	SEN+	SEN-	SHD	•	•
------	------	------	------	------	------	-----	---	---

DVP201LC-SL

EXC+	EXC-	SIG+	SIG-	SEN+	SEN-	SHD	•	•	EXC+	EXC-	SIG+	SIG-	SEN+	SEN-	SHD	•	•
------	------	------	------	------	------	-----	---	---	------	------	------	------	------	------	-----	---	---

DVP202LC-SL

EXC+	EXC-	SIG+	SIG-	SEN+	SEN-	SHD	AO+	AO-	S/S	X0	X1	UP	ZP	Y0	Y1	Y2	Y3
------	------	------	------	------	------	-----	-----	-----	-----	----	----	----	----	----	----	----	----

DVP211LC-SL

2.4 Description of the Indicators

Name	Color	Function
POWER indicator	Green	Displaying power
RUN indicator	Green	Displaying the status of the module
ERROR indicator	Red	Displaying an error
L.V indicator	Red	Showing that the voltage of the an external power is low
LOOP indicator	Green	Loop control
MOTION indicator	Orange	Showing that measurement is stable
X0 indicator/X1 indicator	Red	Showing that X0/X1 is On/Off
Y0~3 indicator	Red	Showing that Y0/Y1/Y2/Y3 is On/Off
NET indicator	Orange	Net/Gross weight indicator
ZERO indicator	Orange	Once the weight value is in the zero point range, this indicator is ON.
MAX indicator	Orange	Maximum weight indicator

MEMO

2

Chapter 3 Installation and Wiring

Table of Contents


3.1	Installation.....	3-2
3.1.1	Connecting a Load Cell Module to a DVP-SV series PLC	3-2
3.1.2	Installing a DVP-SV series PLC and a Load Cell Module on a DIN rail	3-2
3.2	Communication.....	3-3
3.3	External Wiring	3-4
3.4	Selecting a Load Cell Sensor.....	3-6

3.1 Installation

3.1.1 Connecting a Load Cell Module to a DVP-SV series PLC


- Pull the I/O module clips on a DVP-SV series PLC. Insert the points in the corner of a load cell module into the four holes in the DVP-SV series PLC. Please see step ① in the figure below.
- Press the I/O module clips on the DVP-SV series PLC, and make sure that the load cell module is tightly connected to the DVP-SV series PLC. Please see step ② in the figure below.

3

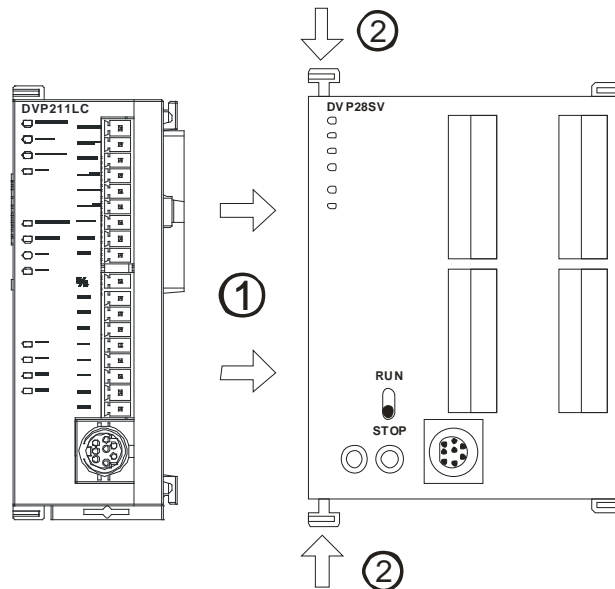


3.1.2 Installing a DVP-SV series PLC and a Load Cell Module on a DIN rail

- Please use a 35 mm DIN rail.
- Pull the DIN rail clips on a DVP-SV series PLC and a load cell module. Install the DVP-SV series PLC and the load cell module on the DIN rail.
- Press the DIN rail clips on the DVP-SV series PLC. Please see the figure below.

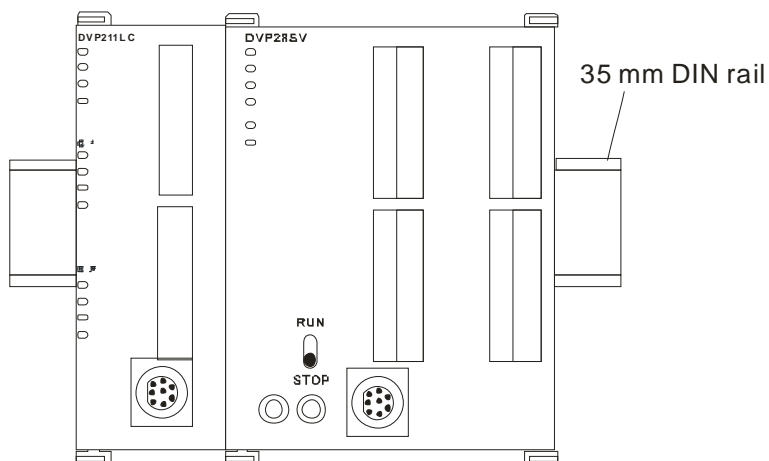


3.2 Communication

 
- Please wire a load cell module according to the definitions of the pins in a communication connector.

PC COM Port 9 PIN D-SUB female			DVP211LC COM Port 8 PIN MINI DIN		
Rx	2	↔	5	Tx	
Tx	3	↔	4	Rx	
GND	5	↔	8	GND	
	7		1,2	5V	
	8				
	1				
	4				
	6				


- There are 2 communication interfaces in a load cell module which can communicate with a PC or other devices. COM1 is an RS-232 port, and COM2 is an RS-485 port. Both ports meet the standard MODBUS protocol. A PC can directly communicate with a load cell module through COM1.
- Delta power supply modules are highly recommended.

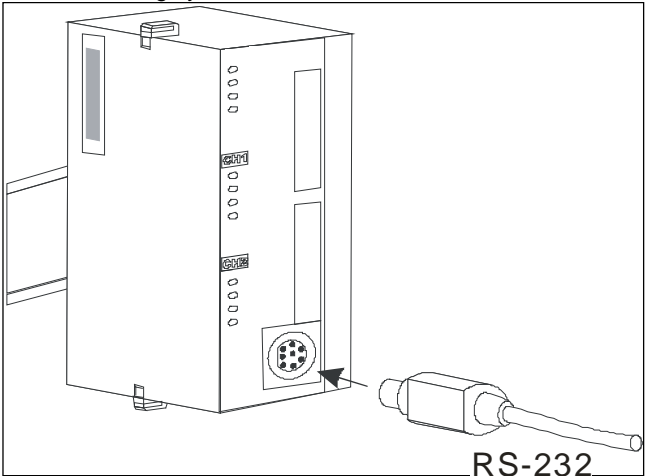

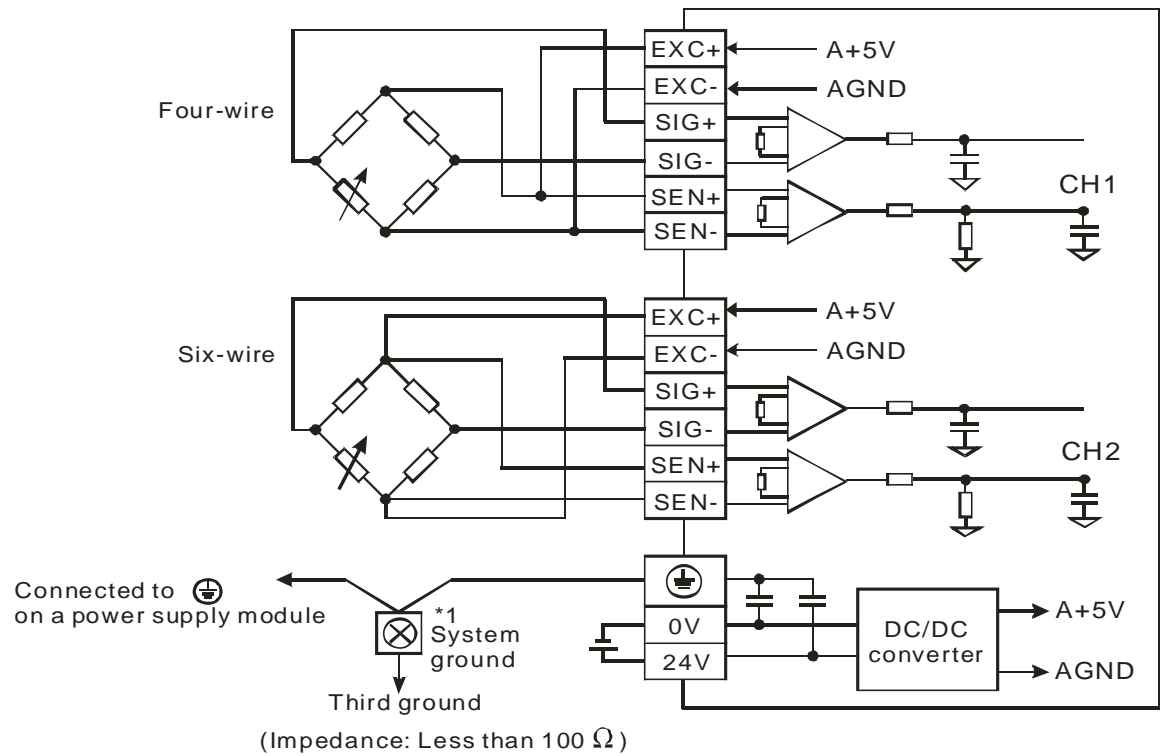

3.3 External Wiring

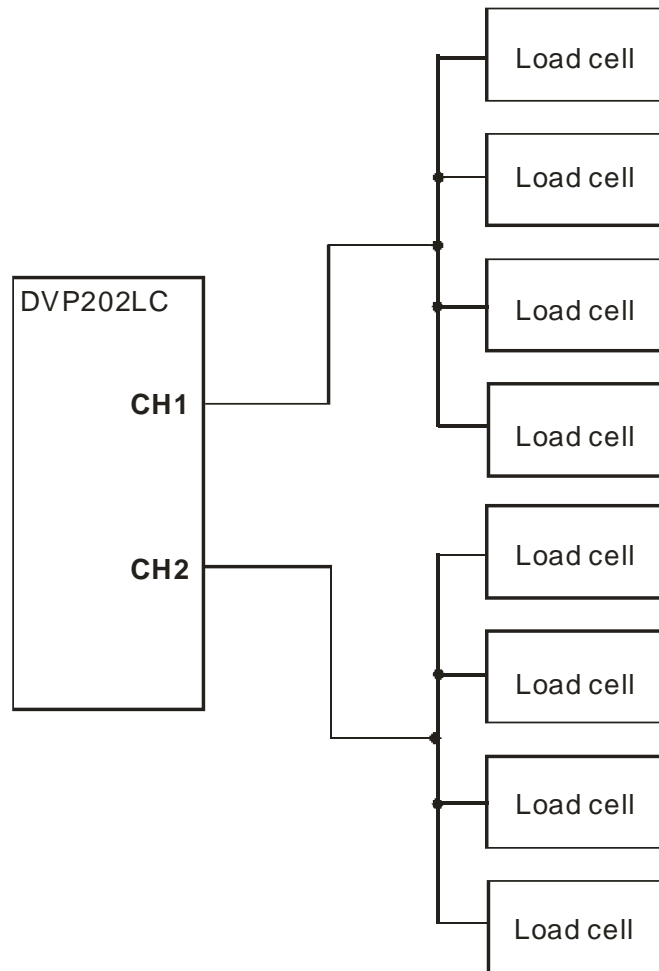

- Multiple load cells connected in parallel are connected to a single load cell module.



Note 1: Please connect  on a power supply module and  on the load cell module to a system ground, and then ground the system ground or connect the system ground to a distribution box.

Note 2: If multiple load cells are connected in parallel, the total impedance should be greater than 40 Ω .

3.4 Selecting a Load Cell Sensor

1. **Exciting voltage:**
An excitation voltage is external power provided for a load cell sensor. The maximum voltage that a sensor can accept is specified in the specifications for the sensor. The exciting voltage that a load cell module provides is +5 V, and therefore a sensor which can accept a voltage greater than 5 V can be used.
2. **Eigenvalue**
A load cell sensor uses a bridge circuit. If a load cell is under pressure, SIG+ and SIG- will output voltages which are in proportion to force. An eigenvalue determines the characteristics of the output of a load cell sensor. The unit used is mV/V. If a load cell receives external force, it will output low voltage.
Output a sensor: $(\text{Force}/\text{Maximum rated load}) \times (\text{Exciting voltage} \times \text{Eigenvalue})$
Example: The eigenvalue of a sensor is 2 mV/V, and the maximum rated load of the sensor is 10 kg. The voltage provided by a module is 5 V. The voltage to which the maximum rated load corresponds is 10 mV. If the load of the sensor is 1 kg, the voltage that the sensor outputs will be 1 mV. The eigenvalue that the module can support is 80 mV/V. The sensors whose eigenvalues are less than 80 mV/V can be used.
3. **Maximum rated load**
When users select a load cell module, they have to consider factors such as loads, tares, vibrations, and shocks. The closer the load on a load cell sensor is to the maximum rated load specified in the specifications for the load cell sensor, the more accurately the load is measured.
4. **Four-wire configuration/Six-wire configuration**
There are two ways to wire a load cell sensor. They are a four-wire configuration and a six-wire configuration. A load cell module provides power for a load cell sensor by means of EXC+/EXC-. However, there is impedance between the load cell module and the sensor. The voltage that the sensor actually receives is less than the voltage provided by the module. The output terminals SIG+ and SIG- on a sensor have relations with the voltages received. If the distance between a module and a sensor is short, the impedance between the module and the sensor will be small, and a four-wire configuration can be adopted. If the distance between a module and a sensor is long, a six-wire configuration can be used to reduce the error resulting from the impedance between the module and the sensor.
5. **Estimating precision**
The precision of a load cell module is 0.04%. The maximum rated load of a load cell sensor multiplied by 0.04% is the maximum precision that a load cell module can resolve. (The measurement time set by default is 50 milliseconds.) If the measurement time set is longer, the precision presented will increase. When users select a load cell sensor, they have to check whether the conversion time of the load cell sensor and the precision of the load cell sensor meet their requirements.

Chapter 4 Control Registers

Table of Contents

4.1	Table of Control Registers.....	4-2
4.2	Descriptions of the Control Registers	4-9
4.3	Descriptions of Functions	4-15
4.3.1	Measuring a Net Weight.....	4-15
4.3.2	Stability Check	4-15
4.3.3	Determining Zero	4-16
4.3.4	Filtering out Weights	4-16
4.3.5	Correspondence between Current Outputs and Weights.....	4-17
4.3.6	Zero Tracking	4-18
4.3.7	Weight Updates	4-18
4.3.8	Output Values Set For Y Points.....	4-18

4.1 Table of Control Registers

CR#	Address	Attribute		Register name	Explanation	
#0	H1000	O	R	Model name	The model code of a load cell module is defined by the module's system. DVP201LC-SL's model code=H'5106 DVP202LC-SL's model code=H'5206 DVP211LC-SL's model code=H'5906	
#1	H1001	O	R	Firmware version	Hexadecimal value The current firmware version of a load cell module is displayed.	
#2	H1002	O	R/W	Characteristic value	CH1: Bit 0~bit 7; CH2: Bit 8~bit 15 Mode 0: 1 mV/V; Mode 4: 20 mV/V Mode 1: 2 mV/V; Mode 5: 40 mV/V Mode 2: 4 mV/V; Mode 6: 80 mV/V Mode 3: 6 mV/V	
#3	H1003	O	R/W	Reaction time for measurement	CH1: bit0~bit7; CH2: bit8~bit15 Mode 0: 2.5ms; Mode 5: 60ms Mode 1: 10ms; Mode 6: 100ms Mode 2: 16ms; Mode 7: 200ms Mode 3: 20ms; Mode 8: 400ms Mode 4: 50ms (factory setting)	
#6	H1006	X	R/W	Returning to zero/Subtracting a tare	K1: Subtracting the tare measured by CH1 K2: Not subtracting the tare measured by CH1 K3: Restoring the weight measured by CH1 to 0	K4: Subtracting the tare measured by CH2 K5: Not subtracting the tare measured by CH2 K6: Restoring the weight measured by CH2 to 0
#7	H1007	O	R/W	Displaying a gross weight/net weight	CH1: Bit 0~bit 7; CH2: Bit 8~bit 15 K0: Displaying a gross weight K1: Displaying a net weight	
#8	H1008	X	R/W	Tare measured by CH1 (Low word)	Displaying a tare	
#9	H1009	X	R/W	Tare measured by CH1 (High word)		

CR#	Address	Attribute		Register name	Explanation
#10	H100A	X	R/W	Tare measured by CH2 (Low word)	
#11	H100B	X	R/W	Tare measured by CH2 (High word)	
#12	H100C	X	R	Weight measured by CH1 (Low word)	Displaying a weight
#13	H100D	X	R	Weight measured by CH1 (High word)	
#14	H100E	X	R	Weight measured by C2 (Low word)	
#15	H100F	X	R	Weight measured by C2 (High word)	
#16	H1010	O	R/W	Number of weights measured by CH1 in a stability range	Setting range: K1~K500 (Factory setting: K5)
#17	H1011	O	R/W	Number of weights measured by CH2 in a stability range	Setting range: K1~K500 (Factory setting: K5)
#18	H1012	O	R/W	Stability range for CH1	Setting range: K1~K10000 (Factory setting: K10)
#19	H1013	O	R/W	Stability range for CH2	Setting range: K1~K10000 (Factory setting: K10)
#20	H1014	O	R/W	Lower limit of the zero return for CH1	Once the weight is in this setting range K-1 ~ K-32768, the status is on-load on the load cell. (Factory setting: K-10)
#21	H1015	O	R/W	Lower limit of the zero return for CH2	
#25	H1019	O	R/W	Total number of points which need to be calibrated	Setting range: K2~K20 (Factory setting: K2)
#26	H101A	X	R/W	Calibration command	CH1: K1~K20 CH2: K21~K40
#27	H101B	O	R/W	Selecting a calibration point for CH1	K1~K19
#28	H101C	O	R/W	Selecting a calibration point for CH2	K1~K19
#29	H101D	O	R/W	Raw data given to a calibration point for CH1 (Low word)	The firmware will load the relevant raw data automatically while calibrating. You can get a similar result of measurement curves by copying the raw data of calibrated points and settings associated to the measurement to other modules, which use the same model of sensors, without calibration. Please be noticed that the above acts may cause unpredictable errors and deviation in the result of measurement curves because of different features between sensors and environment.
#30	H101E	O	R/W	Raw data given to a calibration point for CH1 (High word)	
#31	H101F	O	R/W	Raw data given to a calibration point for CH2 (Low word)	
#32	H1020	O	R/W	Raw data given to a calibration point for CH2 (High word)	

CR#	Address	Attribute		Register name	Explanation
#33	H1021	O	R/W	Digital value given to a calibration point for CH1 (Low word)	Digital values (weight values) correspond to calibration points1~19. E.g. To calibrate a 100g weight to be shown as 1000 on the LCD display, you'll have to write 1000 to CR#33 before calibration. Please refer to chapter 5 for more details.
#34	H1022	O	R/W	Digital value given to a calibration point for CH1 (High word)	
#35	H1023	O	R/W	Digital value given to a calibration point for CH2 (Low word)	
#36	H1024	O	R/W	Digital value given to a calibration point for CH2 (High word)	
#37	H1025	O	R/W	Maximum which can be measured by CH1 (Low word)	Users can specify the maximum weight which can be measured by CH1/CH2. If a weight measured exceeds the maximum weight, an error code (CR#51) will be stored.
#38	H1026	O	R/W	Maximum which can be measured by CH1 (High word)	
#39	H1027	O	R/W	Maximum which can be measured by CH2 (Low word)	
#40	H1028	O	R/W	Maximum which can be measured by CH2 (High word)	
#41	H1029	X	R/W	Storing all setting values (H'5678)	Storing all setting values, and writing them to the flash memory in the load cell module used H0: No action (factory setting) H'FFFF: All setting values are stored successfully. H'5678: Writing all setting values to the flash memory in the load cell module used
#42	H102A	X	R/W	Restoring all settings to factory settings	Restoring all settings to factory settings (H'55AA)
#43	H102B	X	R/W	Way in which weights measured by CH1 are filtered out	K0: Not filtering weights (factory setting) K1: Extrema filtering K2: Average filtering K3: LPF 5Hz K4 : LPF 10Hz K5 : LPF 20Hz K6 : LPF 50/60Hz Note: When set to K3-K6 (Only supported by FW V1.14 and above), the transfer time would be set to 10ms which is mandatory.
#44	H102C	X	R/W	Way in which weights measured by CH2 are filtered out	
#45	H102D	X	R/W	Filter parameter for CH1	Extrema filtering: K0~K8
#46	H102E	X	R/W	Filter parameter for CH1	Average filtering: The number of weights which need to be averaged should be in the range of K1 to K100.(Supported only by FW V1.12 and after)

CR#	Address	Attribute		Register name	Explanation
					Low-pass filtering (LPF): Invalid
#48	H1030	O	R/W	Upper limit for determining whether the digital value corresponding to a weight measured by CH1 is 0 grams	If the digital value corresponding to a weight measured by CH1/CH2 is in the range specified, bit 5/bit 10 in CR#51 will be set (the weight measured is will be counted as 0 grams). Default value: K10 Setting range: K0~K32767
#49	H1031	O	R/W	Upper limit for determining whether the digital value corresponding to a weight measured by CH2 is 0 grams	
#51	H1033	X	R/W	Status code	The status of the load cell module used is stored in this register. Please refer to the status table below for more information. Factory setting: H'0000
#52	H1034	O	R/W	RS-232 station address	The default value in CR#52/CR#54 is K1. The setting values in CR#52 and CR#54 should be in the range of K1 to K255. The default value in CR#53/CR#55 is H'0000 (ASCII, 9600 bps, 7 data bits, even parity bit, one stop bit). Please refer to the communication format table below for more information.
#53	H1035	O	R/W	RS-232 communication format	
#54	H1036	O	R/W	RS-485 station address	
#55	H1037	O	R/W	RS-485 communication format	
#95	H105F	O	R/W	Zero point tracking range of CH1	Setting range: 0 ~ 30000; when set the setting to 0, it indicates zero point tracking is disabled.
#96	H1060	O	R/W	Zero point tracking time of CH1	Setting range: 5 ~ 1000; unit: 0.1 s
#97	H1061	O	R/W	Zero point tracking range of CH2	Setting range: 0 ~ 30000; when set the setting to 0, it indicates zero point tracking is disabled.
#98	H1062	O	R/W	Zero point tracking time of CH2	Setting range: 5 ~ 1000; unit: 0.1 s
#100	H1064	O	R/W	Current output	Setting range: K0~K4000
#101	H1065	X	R	Digital input terminal	Bit 0: X0; Bit 1: X1
#102	H1066	X	R/W	Digital output terminal	Bit 0: Y0; Bit 1: Y1; Bit 2: Y2; Bit 3: Y3

CR#	Address	Attribute		Register name	Explanation
#103	H1067	O	R/W	Way of outputting a current	<p>K0: Digital value(CR#100) corresponding to a current output in the range of 0 mA to 20 mA (factory setting)</p> <p>K1: Digital value(CR#100) corresponding to a current output in the range of 4 mA to 20mA</p> <p>K2: Weight corresponding to a current output in the range of 0 mA to 20mA</p> <p>K3: Weight corresponding to a current output in the range of 4 mA to 20mA</p>
#104	H1068	O	R/W	Way in which a digital input terminal operates	<p>X0: Bit 0~bit 7; X1: Bit 8~bit 15</p> <p>H0: General digital input terminal (factory setting)</p> <p>H1: If a digital input terminal is ON, a weight will be restored to zero,</p> <p>H2: If a digital input terminal is ON, a tare will be measured.</p> <p>H3: If a digital input terminal is ON, a tare will be subtracted.</p> <p>H4: If a digital input terminal is OFF, a net weight will be measured.</p> <p>H6: If a digital input terminal is ON, zero will be adjusted.</p> <p>H7: If a digital input terminal is ON, the first point will be adjusted.</p> <p>H8: rising edge triggered: Y0~Y3 open outputs; falling edge triggered: Y0~Y3 close outputs</p> <p>H9: rising edge triggered: Y0~Y3 close outputs; falling edge triggered: Y0~Y3 open outputs</p> <p>HA: rising edge triggered: Y0~Y3 hold outputs; falling edge triggered: Y0~Y3 open outputs</p> <p>HB: rising edge triggered: Y0~Y3 open outputs; falling edge triggered: Y0~Y3 hold outputs</p> <p>X0 and X1 cannot be set as H4 at the same time.</p> <p>H'A and H'B:</p> <ul style="list-style-type: none"> ● Hold state: State remains Hold while changing

CR#	Address	Attribute		Register name	Explanation			
					Y0 ~ Y3 and CR#109 = 2 (HOLD state). <ul style="list-style-type: none">● Output enabled state: Outputs would be enabled after changing Y0 ~ Y3.			
#105	H1069	O	R/W	Way in which a digital output terminal operates	Bit 15~bit 12	Bit 11~bit 8	Bit 7~bit 4	Bit 3~bit 0
					Y3	Y2	Y1	Y0
					H0: General digital output terminal (factory setting) H1: If no weight is measured, a digital output terminal will be ON. H2: If no weight is measured, a digital output terminal will be OFF. H3: If a weight measured is greater than the maximum weight specified, a digital output terminal will be ON. H4: If a weight measured is greater than the maximum weight specified, a digital output terminal will be OFF. H5: If an excitation voltage is abnormal, a digital output terminal will be ON. H6: If an excitation voltage is abnormal, a digital output terminal will be OFF. H7: If a weight measured is in the stability range specified, a digital output terminal will be ON. H8: If a weight measured is in the stability range specified, a digital output terminal will be OFF. H'9: If a weight measured is greater than t the weight value that is set to output, a digital output terminal will be ON. H'A: If a weight measured is greater than t the weight value that is set to output, a digital output terminal will be OFF.			
#106	H106A	O	R/W	Weight changing of CH1	Default: K0; setting range: K0 ~ K32767			
#107	H106B	O	R/W	Weight changing of CH2	Default: K0; setting range: K0 ~ K32767			

CR#	Address	Attribute		Register name	Explanation
#109	H106D	X	R/W	Status of Y point	Work with CR#104 and Y points 0: Y point output enabled (default) 1 : Y point output closed (the status of Y0-Y3 is OFF) 2: Y point output on hold (the status of Y0-Y3 cannot be changed)
#110	H106E	O	R/W	Y0 weight output setting value (Low word)	When the weight is greater than the weight value that is set to output, you can set the Y point output to ON or OFF.
#111	H106F	O	R/W	Y0 weight output setting value (High word)	
#112	H1070	O	R/W	Y1 weight output setting value (Low word)	
#113	H1071	O	R/W	Y1 weight output setting value (High word)	
#114	H1072	O	R/W	Y2 weight output setting value (Low word)	
#115	H1073	O	R/W	Y2 weight output setting value (High word)	
#116	H1074	O	R/W	Y3 weight output setting value (Low word)	
#117	H1075	O	R/W	Y3 weight output setting value (High word)	
#118	H1076	O	R/W	Y0 delay output time	Default: 0; setting range: 0 ~ 300; unit: 10 ms
#119	H1077	O	R/W	Y1 delay output time	
#120	H1078	O	R/W	Y2 delay output time	
#121	H1079	O	R/W	Y3 delay output time	

4.2 Descriptions of the Control Registers

CR#0: Model name

[Description]

DVP201LC-SL's model code=H'5106

DVP202LC-SL's model code=H'5206

DVP211LC-SL's model code=H'5906

CR#1: Firmware version

[Description]

High byte: Number at the left side of the decimal point in a version number

Low byte: Number at the right side of the decimal point in a version number

Example: V1.01→CR#=H'0101

CR#2: Eigenvalue

[Description]

The specifications for load cells vary from brand to brand. Users need to set an eigenvalue according to the specification for the load cell used.

Eigenvalue		
Specifications for the eigenvalue in a load cell	Selection of an eigenvalue	Setting value in CR#2
$0 \text{ mV/V} < \text{Eigenvalue} \leq 1 \text{ mV/V}$	1m V/V	H'0000
$0 \text{ mV/V} < \text{Eigenvalue} \leq 2 \text{ mV/V}$	2m V/V	H'0001 (Default setting)
$0 \text{ mV/V} < \text{Eigenvalue} \leq 4 \text{ mV/V}$	4m V/V	H'0002
$0 \text{ mV/V} < \text{Eigenvalue} \leq 6 \text{ mV/V}$	6m V/V	H'0003
$0 \text{ mV/V} < \text{Eigenvalue} \leq 20 \text{ mV/V}$	20m V/V	H'0004
$0 \text{ mV/V} < \text{Eigenvalue} \leq 40 \text{ mV/V}$	40m V/V	H'0005
$0 \text{ mV/V} < \text{Eigenvalue} \leq 80 \text{ mV/V}$	80m V/V	H'0006
Eigenvalue > 80 mV/V	Not supported	

CR#3: Reaction time for measurement

[Description]

Users can set the time which needs to elapse before a weight is sampled. The shorter the time set is, the shorter the time it takes to filter weights. The weights measured are not in a stability range. If the time set is the maximum time which can be set, the weights measure will be in a stability range.

4

Reaction time for measurement	
Input value	Description
Mode 0: H'0000	2.5 ms
Mode 1: H'0001	10 ms
Mode 2: H'0002	16 ms
Mode 3: H'0003	20 ms
Mode 4: H'0004	50ms (Default setting)
Mode 5: H'0005	60 ms
Mode 6: H'0006	100 ms
Mode 7: H'0007	200 ms
Mode 8: H'0008	400 ms

CR#6: Returning to zero/Subtracting a tare

[Description]

Users can use CR#6 to restore the weight measured to zero.

Input value	Description
K1	Subtracting the tare measured by CH1, while saving the tare weight in CR#8 and #9 (DWORD).
K2	Not subtracting the tare measured by CH1
K3	Restoring the weight measured by CH1 to zero each time the device is rebooted.
K4	Subtracting the tare measured by CH2, while saving the tare weight in CR#10 and #11 (DWORD).
K5	Not subtracting the tare measured by CH2
K6	Restoring the weight measured by CH2 to zero each time the device is rebooted.

CR#7: Displaying a gross weight/net weight

[Description]

Users can choose to display a gross weight or a net weight. The channel which is not used can be disabled.

Bit 15~bit 8	Bit 7~bit 0
CH2	CH1
K0: Displaying a gross weight	

K1: Displaying a net weight

CR#8~11: Tare measured by CH1/CH2

[Description]

Tares are displayed in CR#8~CR#11. Users can write tares to CR#8~CR#11, or use CR#8~CR#11 to read tares.

CR#12~15: Weight measured by CH1/CH2

[Description]

Weights are displayed in CR#12~CR#15.

CR#16~17: Number of weights measured by CH1 in a stability range

[Description]

Factory setting: K5

Setting range: K1~K500

Please refer to section 4.3.2 for more information.

CR#18~19: Stability range for CH1/CH2

[Description]

Factory setting: K10

Setting range: K1~K10,000

Please refer to section 4.3.2 for more information.

CR#25: Total number of calibration points

[Description]

Factory setting: K2

Setting range: K2~K20

Users generally adjust two points, but they can adjust several points. The maximum number of points which can be adjusted is 20.

CR#26: Calibration command

[Description]

A calibration command is stored in CR#26.

Command value	Description of CR#26
K1~K20	<p>K1: The command value is used when no weight is measured by CH1.</p> <p>K2~K20: The command values are used when calibration point 1~point 19 which are measured by CH1 need to be adjusted.</p>

K21~40	<p>K21: The command value is used when no weight is measured by CH2.</p> <p>K22~K40: The command values are used when calibration point 1~point 19 which are measured by CH2 need to be adjusted.</p>
--------	---

CR#27~28: Selecting calibration points for CH1/CH2

[Description]

Digital and raw values of calibration points displayed in CR#29~36 are determined by the calibration points selected in CR#27~28.

CR#	Command value	Description
CR#27	K1~K19	Selecting point 1~point 19 for CH1
CR#28	K1~K19	Selecting point 1~point 19 for CH2

CR#29~32: Raw value given to calibration points for CH1/CH2

[Description]

The raw values given to calibration points are displayed in CR#29~CR#32.

CR#33~36: Digital values given to calibration points for CH1/CH2

[Description]

The digital values of points need to be written to CR#33~CR#36 while calibrating.

E.g. To calibrate a 100g weight to be shown as 1000 on the LCD display, you'll have to write 1000 to CR#33 before calibration. Please refer to chapter 5 for more details.

CR#37~40: Maximum weight which can be measured by CH1/CH2

[Description]

Users can specify the maximum weight which can be measured by CH1/CH2. If the weight measured by CH1/CH2 exceeds the maximum weight specified, bit 4/bit 9 in CR#51 will be set to 1.

CR#41: Storing all setting values

[Description]

If write H'5678 to CR#41, all setting values will be stored in the flash memory in the load cell module used. After being stored successfully, the value in CR#41 will become H'FFFF. If the value written to CR#41 is not H'5678, it will automatically become H'0.

Description	H'0	H'5678
Setting	No action	Writing all setting values to the flash memory in the load cell module used

CR#43~44: Way in which weights measured by CH1/CH2 are filtered out

[Description]

Users can set a way in which weights measured by CH1/CH2 are filtered out according to their requirements.

K0: Not filtering weights (factory setting)

K1: Filtering out the maximum weight measured

K2: Averaging weights

K3-K6: Low Pass Filter (LPF)

CR#45~46: Filter parameter for CH1/CH2

[Description]

Filtering out the maximum weight measured: K0~K8

Averaging weights: The number of weights which need to be averaged should be in the range of K1 to K100.

(Supported by firmware V1.12 and above.)

This value would be useless when under low-pass filter mode.

CR#48~49: Range for determining whether the digital value corresponding to a weight measured by CH1/CH2 is 0 grams

CR#20~21: Range for determining whether the digital value corresponding to a weight measured by CH1/CH2 is at its lower limit.

[Description]

If the digital value corresponding to a weight measured by CH1/CH2 is in the upper and lower range specified, bit 5/bit 10 in CR#51 will be set to 1.

CR#51: Status code

[Description]

Bit number	Value	Description
Bit 0	H'0001	Abnormal power
Bit 1	H'0002	Hardware failure
Bit 2	H'0004	The weight measured by CH1 exceeds the maximum weight which can be measured, or the voltage of SEN is incorrect.
Bit 3	H'0008	CH1 is adjusted incorrectly.
Bit 4	H'0010	The weight measured by CH1 exceeds the maximum weight which can be measured.
Bit 5	H'0020	No weight is measured by CH1.
Bit 6	H'0040	A weight measured by CH1 is in the stability range specified.
Bit 7	H'0080	The conversion of a weight measured by CH2 into a digital value is incorrect, or the voltage of SEN is incorrect.
Bit 8	H'0100	CH2 is adjusted incorrectly.

Bit number	Value	Description
Bit 9	H'0200	The weight measured by CH2 exceeds the maximum weight which can be measured.
Bit 10	H'0400	No weight is measured by CH2.
Bit 11	H'0800	A weight measured by CH2 is in the stability range specified.
Bit 12~bit 15	Reserved	

CR#52~55: Setting RS-232/RS-485 communication

[Description]

Bit 15	Bit 14~Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ASCII/RTU	Reserved	Serial transmission speed				Data length	Stop bit	Parity bit	
Description									
Bit 15	ASCII/RTU			0	ASCII		1	RTU	
Bit 7~bit 4	Serial transmission speed			0	9,600 bps		1	19,200 bps	
				2	38,400 bps		3	57,600 bps	
				4	115,200 bps		5	Reserved	
Bit 3	Data length (RTU=8 bits)			0	7		1	8	
Bit 2	Stop bit			0	1 bit		1	2 bits	
Bit 1~bit 0	Parity bit			0	Even		1	Odd	
				2	Reserved		3	Reserved	

Example: If RS-232 communication format is "115200, 7, E, 1, ASCII", the value in CR#53 will be H'0400.

4.3 Descriptions of Functions

4.3.1 Measuring a Net Weight

Users can choose to measure the net weight or the gross weight of an object. A net weight is the weight of a product, that is, the actual weight of a product without its package. The weight of a package is a tare. A gross weight is a total weight, namely a net weight plus a tare.


- Tare: A tare is the weight of a package
- Net weight: A net weight is the weight of a product, that is, the actual weight of a product without its package.
- Gross weight: A gross weight is a total weight, namely the weight of a product itself (a net weight) plus the weight of a package (a tare).
- Gross weight=Net weight+Tare
Example: A product weighs 10 kilograms, and the carton in which the product is packed weighs 0.2 kilograms. The total weight gotten is 10 kilograms.
Net weight=10 kg
Tare=0.2 kg
Gross weight=10.2 kg
- Relevant control registers
 - CR#6: Returning to zero/Subtracting a tare
 - CR#7: Displaying a gross weight/net weight
 - CR#8~11: Tare measured by CH1/CH2

4.3.2 Stability Check

When an object is put on a load cell, users can check whether the present weight of the object is in a stability range specified.

- If a weight measured is in a stability range specified by users (CR#18/CR#19), bit 6/bit 11 in CR#51 will be set to 1.
- If a weight measured exceeds a range specified by users (CR#18/CR#19), bit 6/bit 11 in CR#51 will be set to 0. Bit 6/Bit 11 in CR#51 will not be set to 1 until the number of weights measured in a stability range reaches the value in CR#16/CR17.



Example: The measurement time set is 10 milliseconds, the number of weights measured in a stability range is 10, and the stability range set is 1000 grams. If a variation exceeds 1000 grams, bit 6/bit 11 in CR#51 will be set to 0. If the variations in 100 milliseconds (10×10 ms) are within 1000 grams, bit 6/bit 11 in CR#51 will be set to 1. (Users should judge whether the present weight measured is in the stability range set before they perform control.)

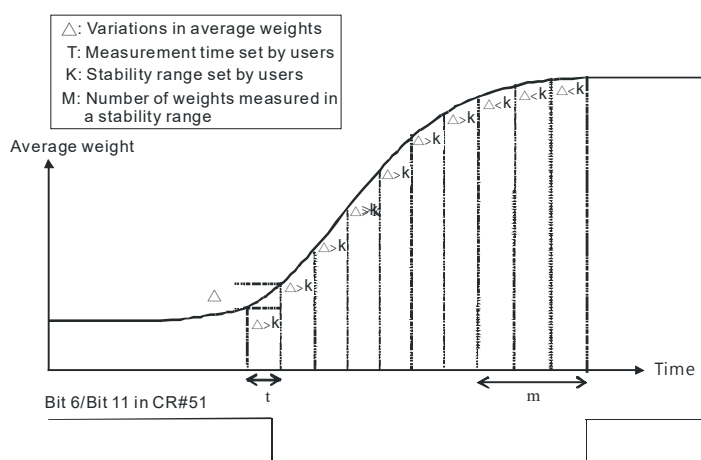

- Relevant control registers
 - CR#16/CR#17: Number of weights measured by CH1/CH2 in a stability range
 - CR#18/CR#19: Stability range for CH1/CH2

4.3.3 Determining Zero

If an object is removed from the load cell used, bit 6/bit 11 in CR#51 will be set to 1, bit 5/bit 10 in CR#51 will be set to 1, and users can perform the next control. (If a weight measured is in the zero range specified, bit 5/bit 10 in CR#51 will be set to 1.)

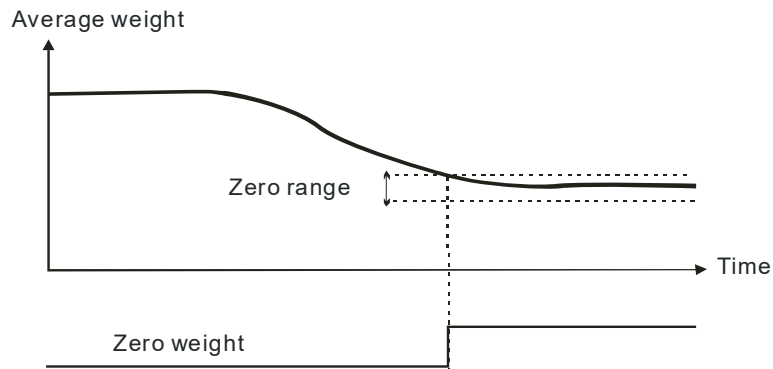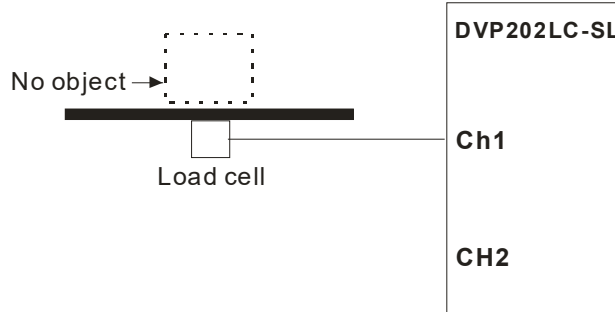

- Relevant control registers
 - CR#48/CR#49: Range for determining whether a weight measured by CH1/CH2 is 0 grams


4.3.4 Filtering out Weights

There are two ways to filter out weights.


- Filtering out the maximum/minimum weight measured: If there is a maximum weight or a minimum weight, CR#45/CR#46 can be used to filter out the maximum weight or the minimum weight. If the value in CR#45/CR#46 is bigger, more weights will be filtered out. Setting range: K0~K8
- Averaging weights: The values read are averaged so that a steady value is obtained. There may be peak values due to unavoidable external factors, and the average value obtained changes accordingly. The maximum number of values which can be averaged are 100.
- Low-pass filters (LPF) with different cutoff frequencies are provided. (Supported by firmware V1.14 and above.)

4.3.5 Correspondence between Current Outputs and Weights

Currents outputs directly correspond to weights. Currents vary with weights. Users can set a current output mode by means of CR#103.

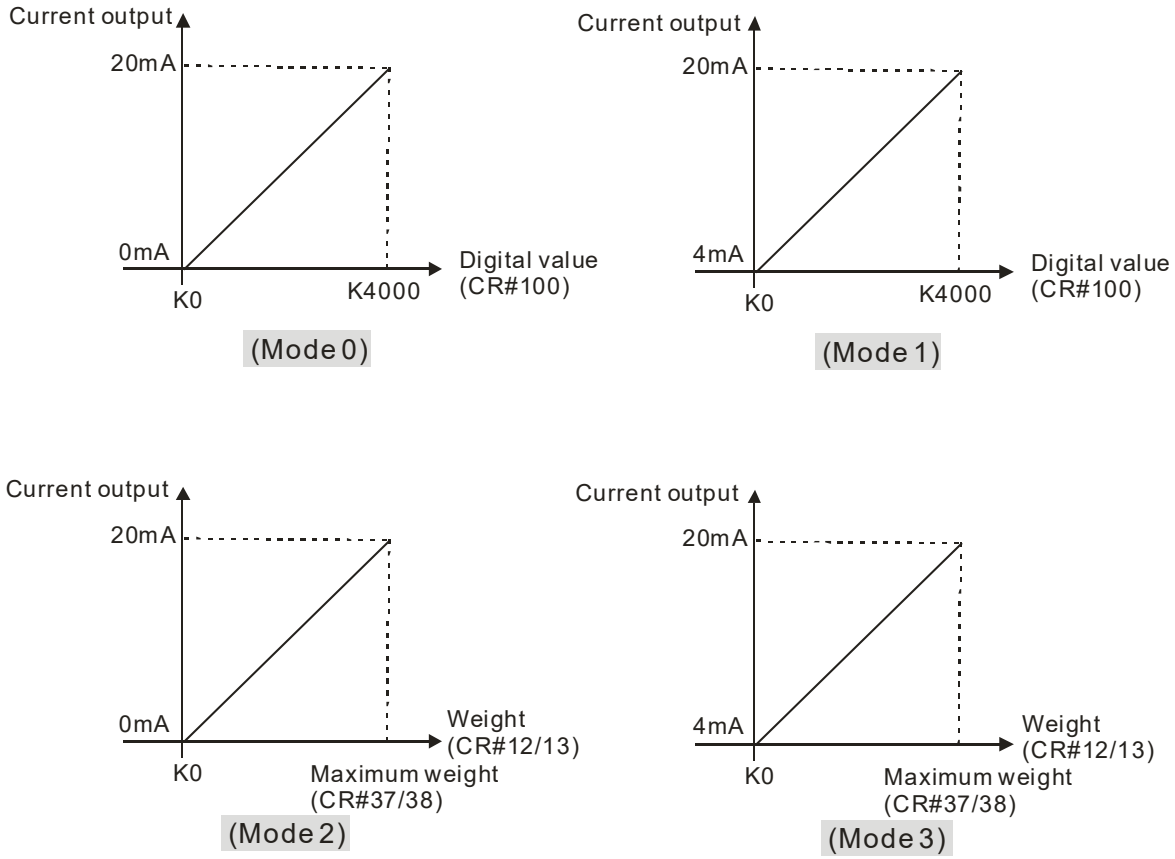


Example: 10 kg correspond to 20 mA.

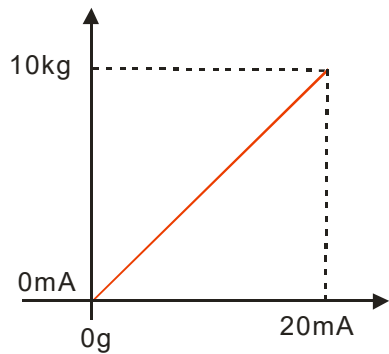


A load cell module is directly connected to the left side of a DVP series PLC. The instruction TO is used to set parameters.

CR#103 is set to K2, and CR#37/CR#38 is set to K10000. Please see the WPLSoft program shown below.

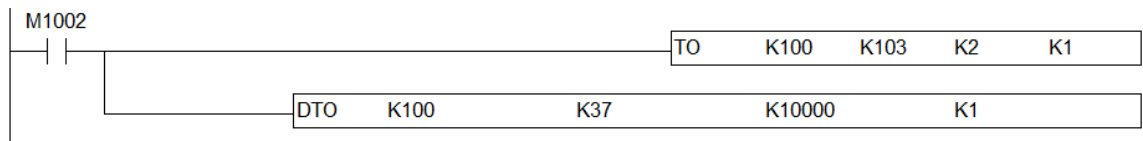

4.3.6 Zero Tracking

That is Auto-zero function. Sensor may lose flexibility and accuracy after being used for a long time. In this case, you can set up a range for time and weight that zero tracking is attempted. Please refer to CR#95~CR#98 for relevant information of settings.

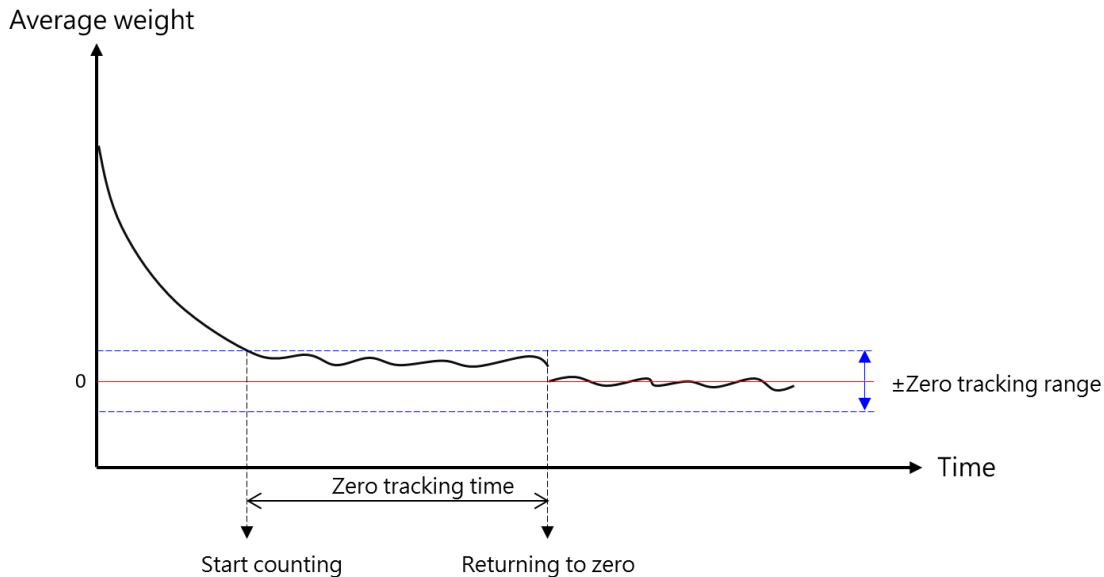


4.3.7 Weight Updates

Weight values would be updated in real time while using control registers. Meanwhile, you are allowed to configure the settings of changes in weight values in CR#106~CR#107 and the weight value would only be updated when the changes is greater than the setting value.

4.3.8 Output Values Set For Y Points

When the weight is greater than the weight value that is set to output, you can set the Y point output to ON or OFF. With delay output time, you can prevent multiple Y points from being enabled at the same time. Please refer to CR#110~CR#121 for details of the related settings.

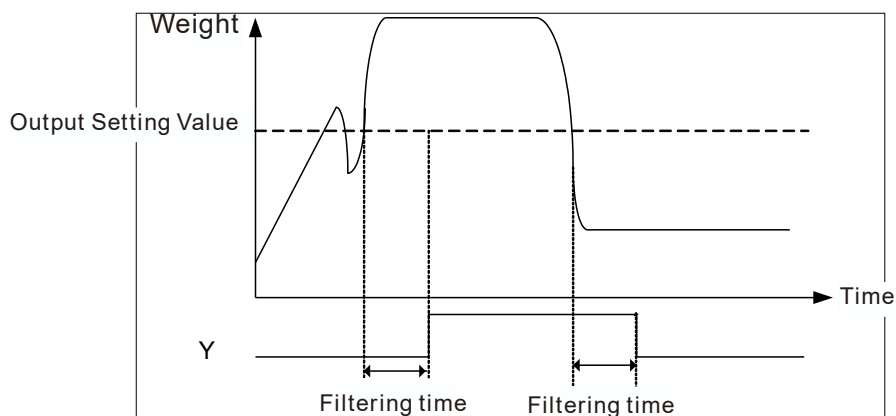


5

Chapter 5 Making Adjustment

Table of Contents


5.1	Steps in Adjusting Points.....	5-3
5.2	Example 1	5-4
5.3	Example 2	5-5

The purpose of making adjustment is to make the weight measured by a cell correspond to the digital value displayed in a load cell module. Generally, two points are adjusted. After a system is set up, users can put no load on the scale. The weight measured is 0 grams when no load is put on the scale. The users can put a given weight on the scale, and set a digital value corresponding to the weight. The two points are adjusted. For example, if a load cell sensor which can measure a maximum weight of 10 kg is used, and 1 kg correspond to K1000, the curve presented will be like the one shown below.

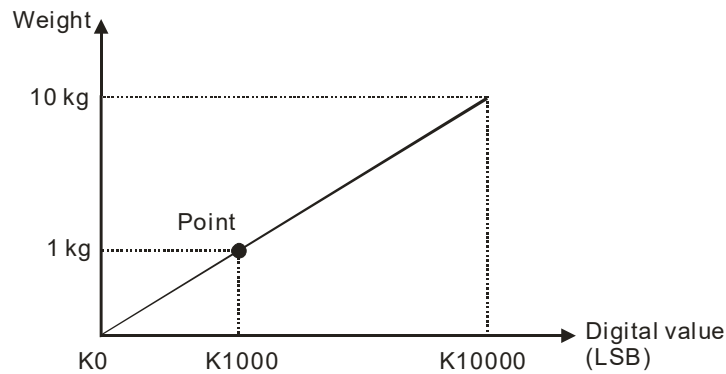


Adjusting two points

In addition to the adjustment of two points, a load cell supports the adjustment of multiple points (20 points at most). A characteristic curve is shown below.

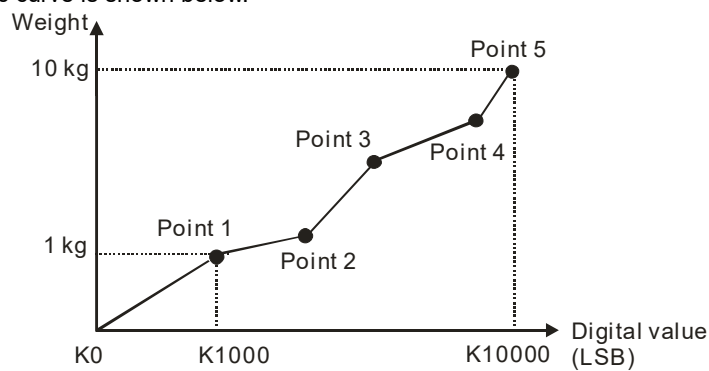

Adjusting multiple points

5.1 Steps in Adjusting Points

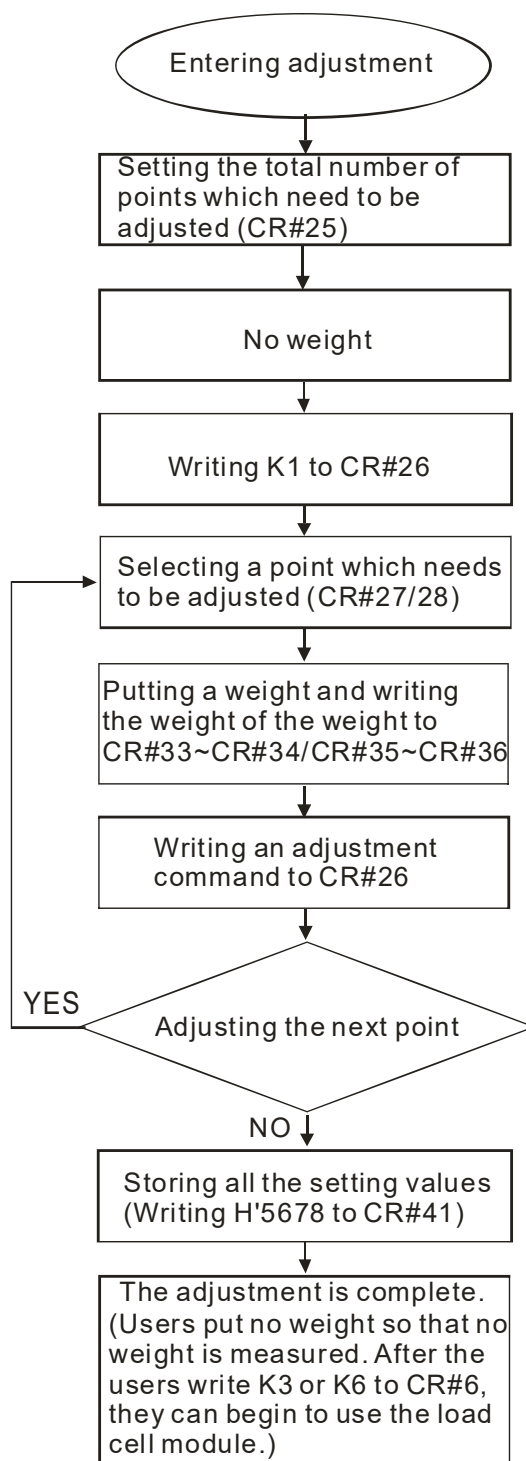


5.2 Example 1

Example: One point is adjusted. (A weight which weighs 1 kg corresponds to 1000 lsb.)

A load cell module is directly connected to the left side of a DVP series PLC. The instruction TO is used to make adjustment. The steps in making adjustment are as follows.

 
Step 1: Write K2 to CR#25. Please see the WPLSoft program shown below.




Step 2: Connect a load cell to a module, and put no load on the load cell.




Step 3: Write H'0001 to CR#26. Please see the WPLSoft program shown below.

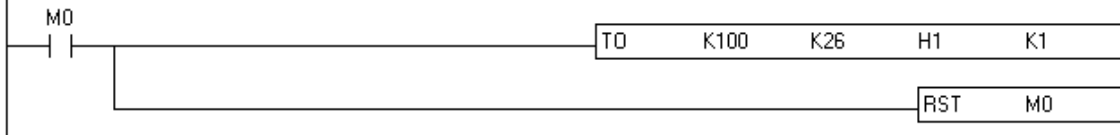


Step 4: Select point 1 (default setting), and write H1 to CR#27. Please see the WPLSoft program shown below.

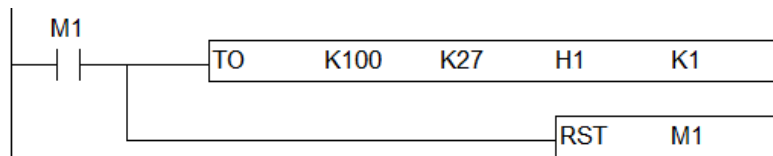


Step 5: Put a standard weight which weighs 1000 g on the load cell.

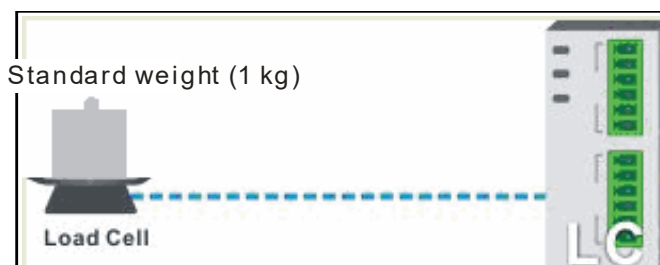


Step 6: Write K1000 (1000 g) to CR#33.

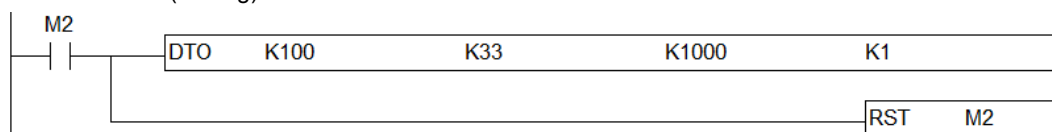

Step 7: Write H2 to CR#26.

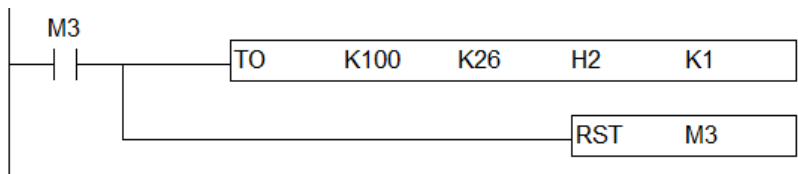

Step 8: Make sure that the value displayed is correct, and make the adjustment retentive. Write H'5678 to CR#41. Please see the WPLSoft program shown below.

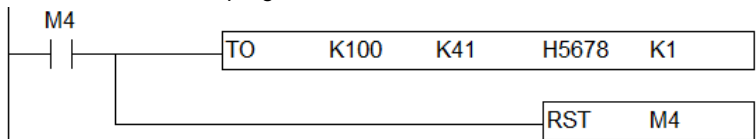


5.3 Example 2

Example: Three points are adjusted.

Note: Digital values of modules would not be affected by decimal place setting and the unit of weight measurement, which are for LCSoft display only.


A load cell module is used independently. The steps in making adjustment are as follows.

Step 1: Select **3** in the **The Num. of Adjustment** box. The weight of the first weight is 500 g. It corresponds to 500 lsb. The weight of the second weight is 1000 g. It corresponds to 1000 lsb. The weight of the third weight is 1500 g. It corresponds to 1500 lsb. Please see the figure below.

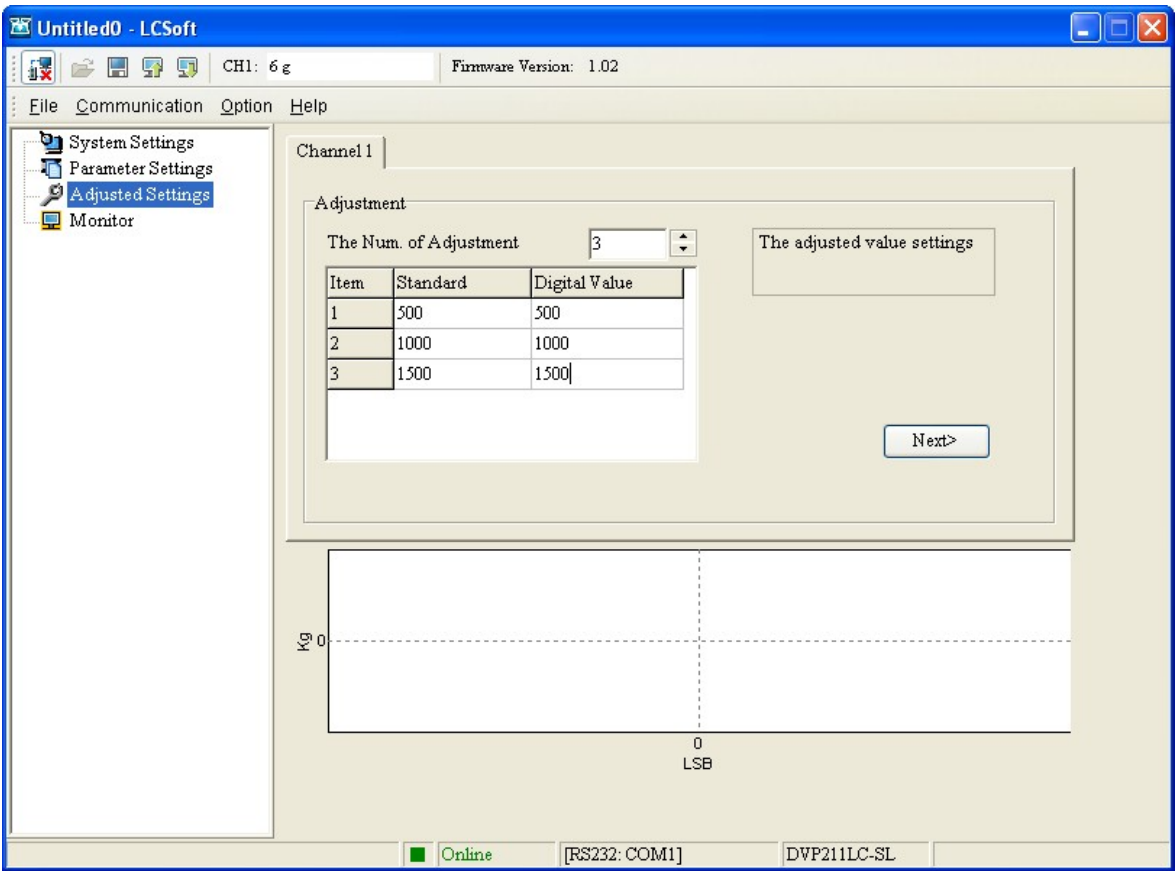


5

Step 2: Put no load on the load cell used. Please see the figures below.


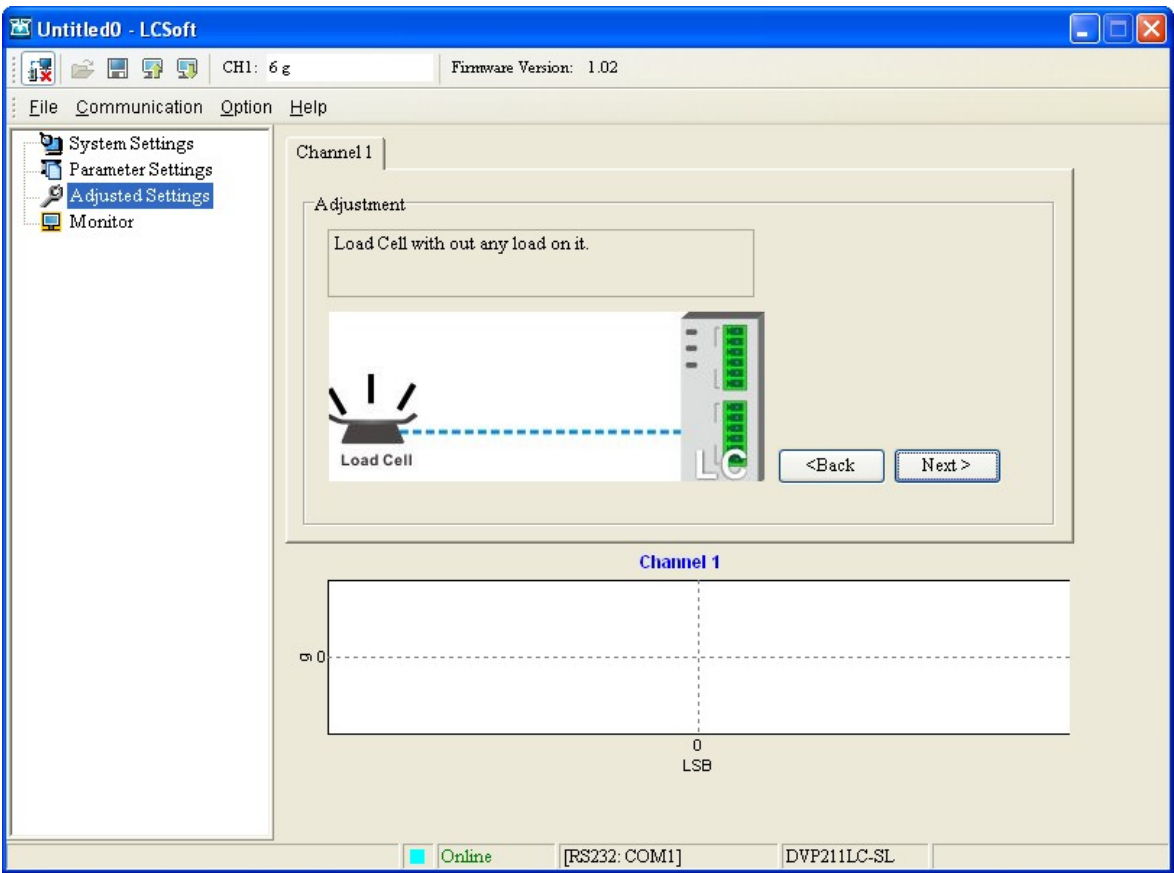


Step 3: Put a standard weight which weighs 500 g on the load cell used, and click **Next**. Please see the figure below.

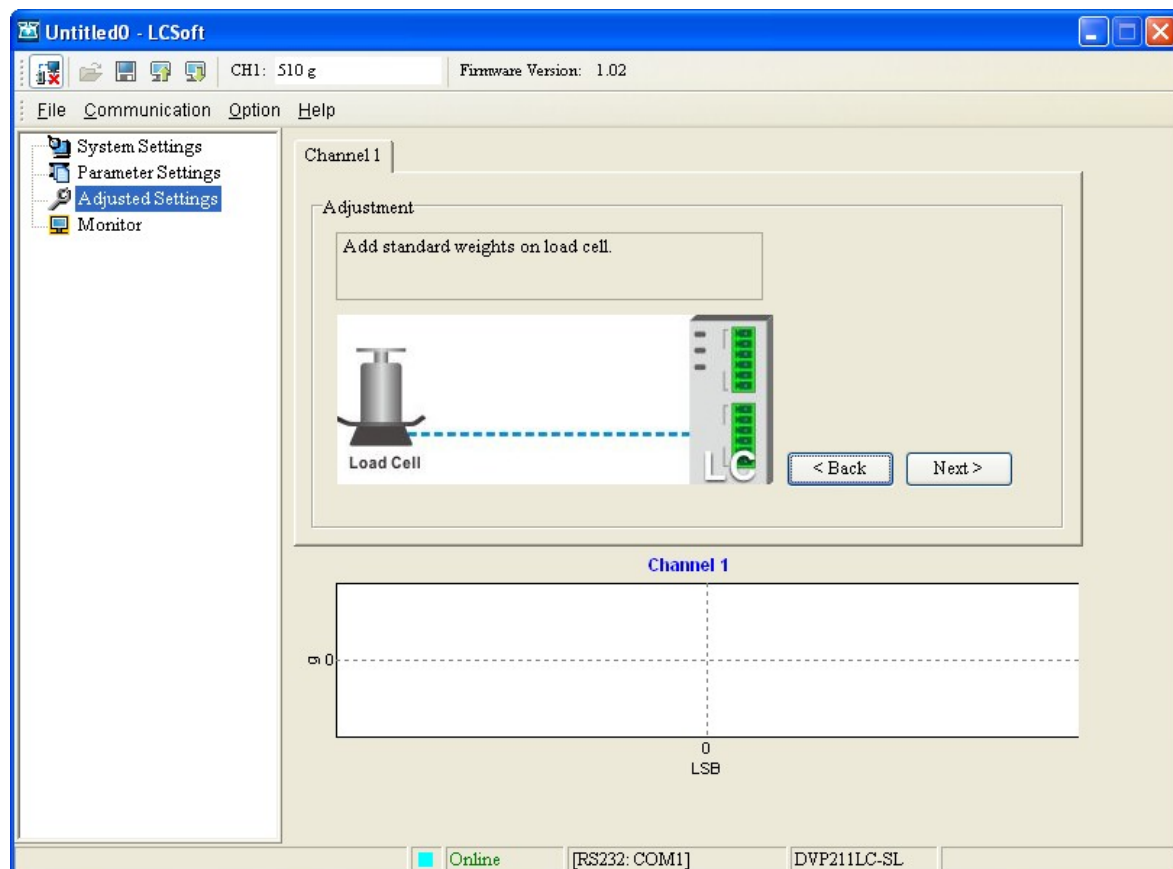


5


Step 4: Type "500" in the **Wight value of weights** box, type "500" in the **Digital value of weights** box, and click **Next**. Please see the figures below.

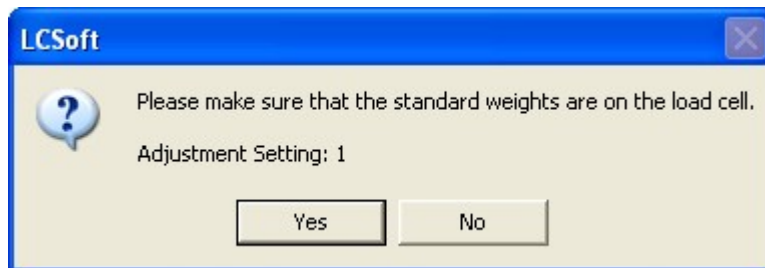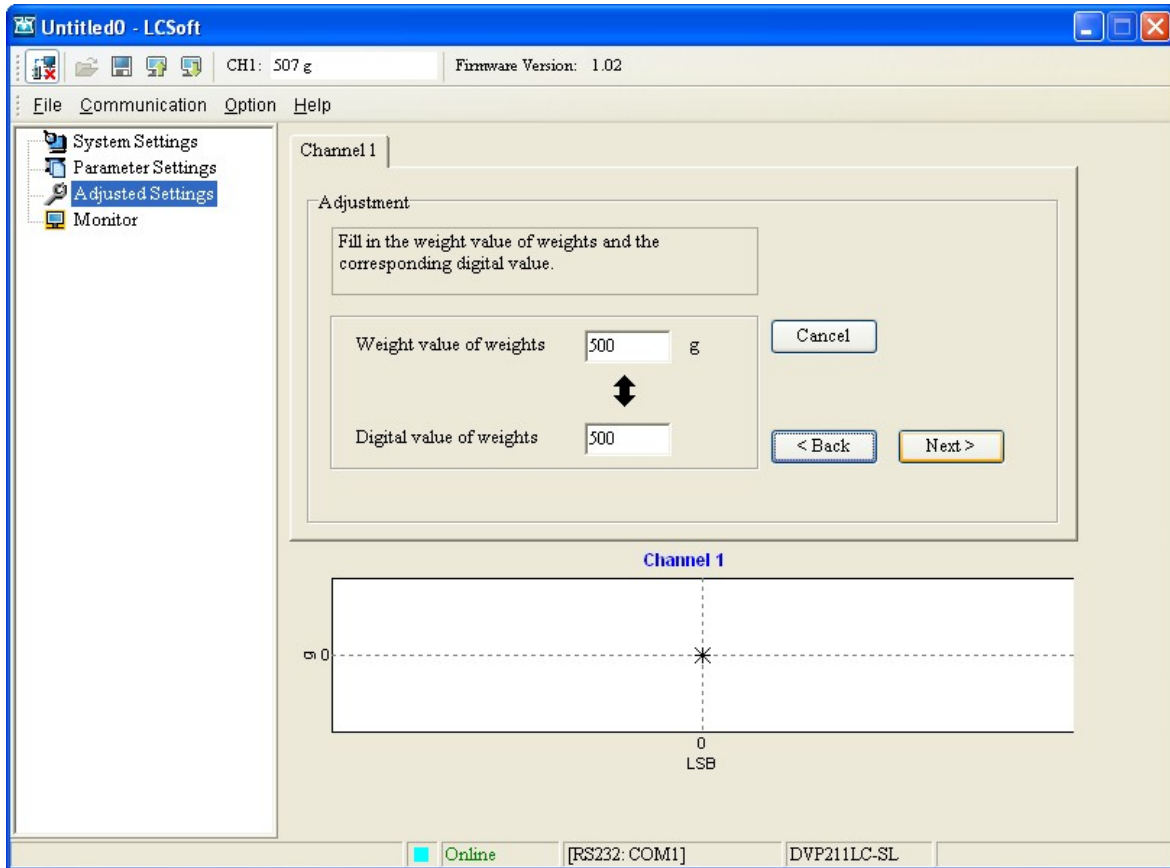



Step 5: Put a standard weight which weighs 1000 g on the load cell used. Type “1000” in the **Wight value of weights** box, type “1000” in the **Digital value of weights** box, and click **Next**. Please see the figures below.

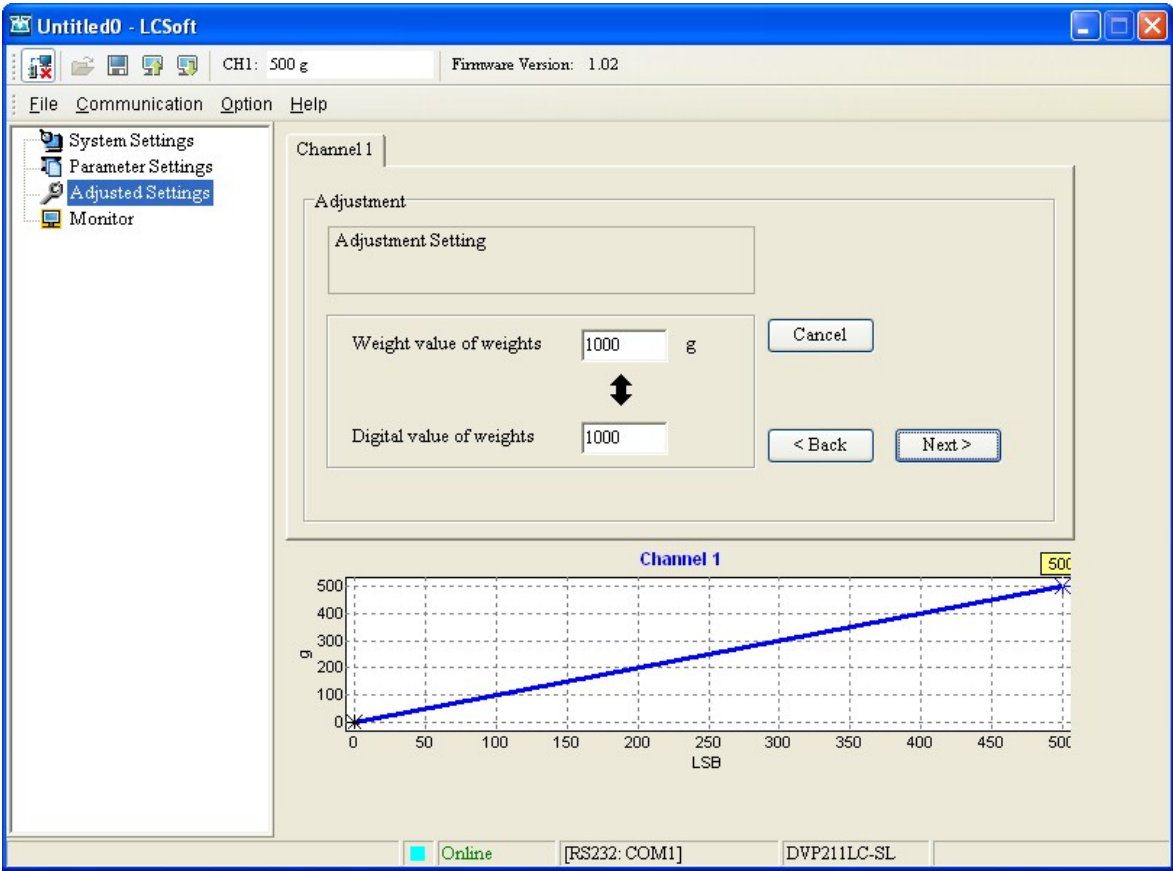


5

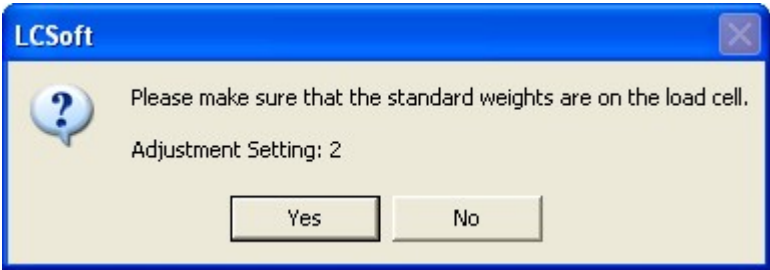

Step 6: Put a standard weight which weighs 1500 g on the load cell used. Type “1500” in the **Wight value of weights** box, type “1500” in the **Digital value of weights** box, and click **Next**. Please see the figures below.

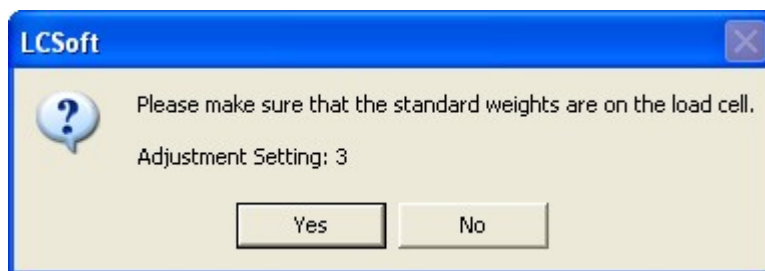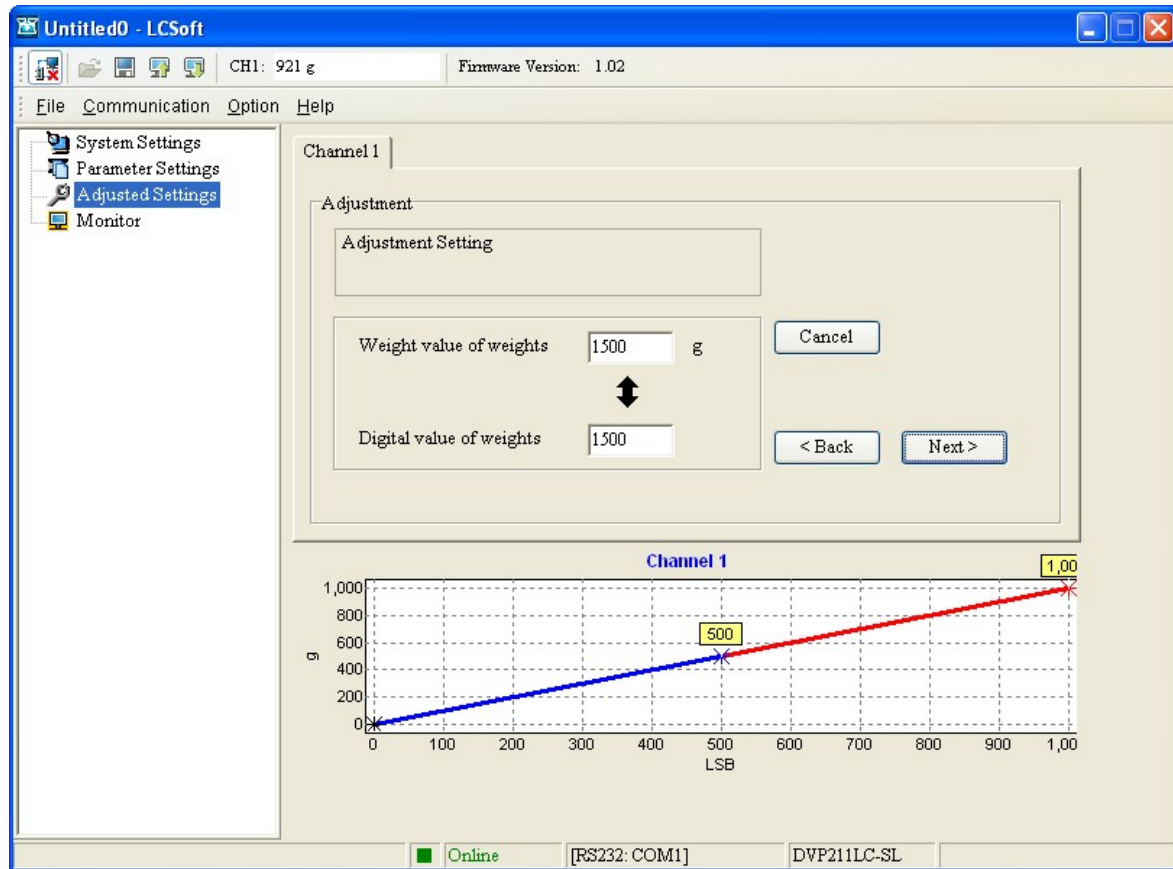

Step 7: The adjustment made is complete, and a curve is displayed. Please see the figures below.

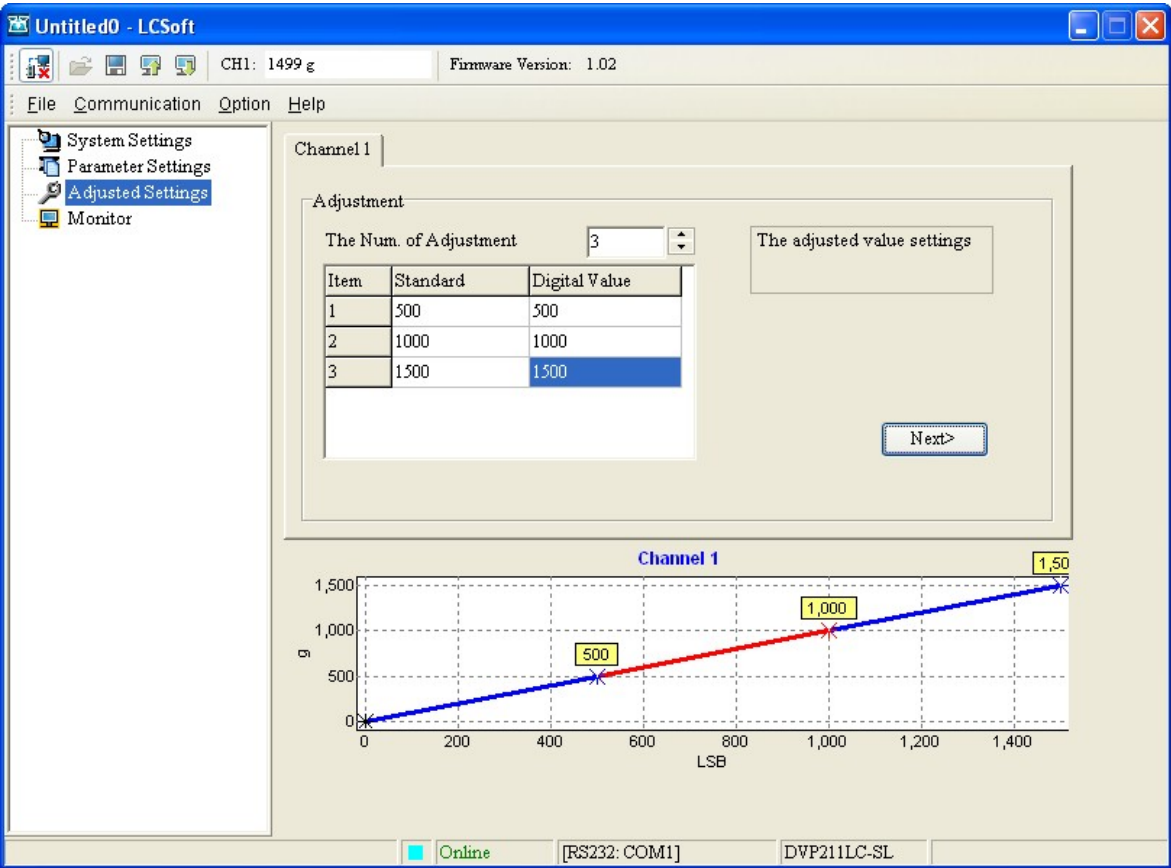

5

MEMO

5